



DSC 1555RK

Quick Reference

STAY ARMING; HOLD [1] (3 SECS), AWAY ARMING; HOLD [2] (3 SECS)
(Motions-off) (Motions-on)

PROGRAMMING NEW MASTER CODE:

ENTER: [*], [5], [current Master Code], [40], [new Master Code], [#]

PROGRAMMING ADDITIONAL CODES:

ENTER: [*], [5], [Master Code], [code no. (01-32)], [new access code], [#]

ENTER: [*], [5], [Master Code], [33], [new Duress/Ambush code], [#]

DOOR CHIME ON/OFF:

ENTER: [*], [4] (3-BEEPS-ON/LONG BEEP-OFF)

AT HOME ARMING:

ENTER: [*], [9], [CODE], (bypass' interior zones and eliminates delay)

SYSTEM LIGHT:

TROUBLE

ENTER: [*], [2] (each zone represents a trouble condition, check index in manual)

MEMORY

ENTER: [*], [1], [3] (displays last violated zone)

Bypass:

ENTER: [*], [1], [ZONE(S) TO BE BYPASSED (01-08)], [#]

OVERRIDE BYPASS WHEN SYSTEM IS ARMED

ENTER: [*], [1]

TO RESET SMOKES:

ENTER: [*], [72], [#]

TO CANCEL: (RESETS IMPROPER CODE), (TO JUMP OUT OF MEMORY, BYPASS OR TROUBLE MODES)

ENTER: [#]

For monitoring service call 281.272.8600
State Lic. B-9961